
Typical Shallow Shoreline Side View
Dry Stone Reinforcement

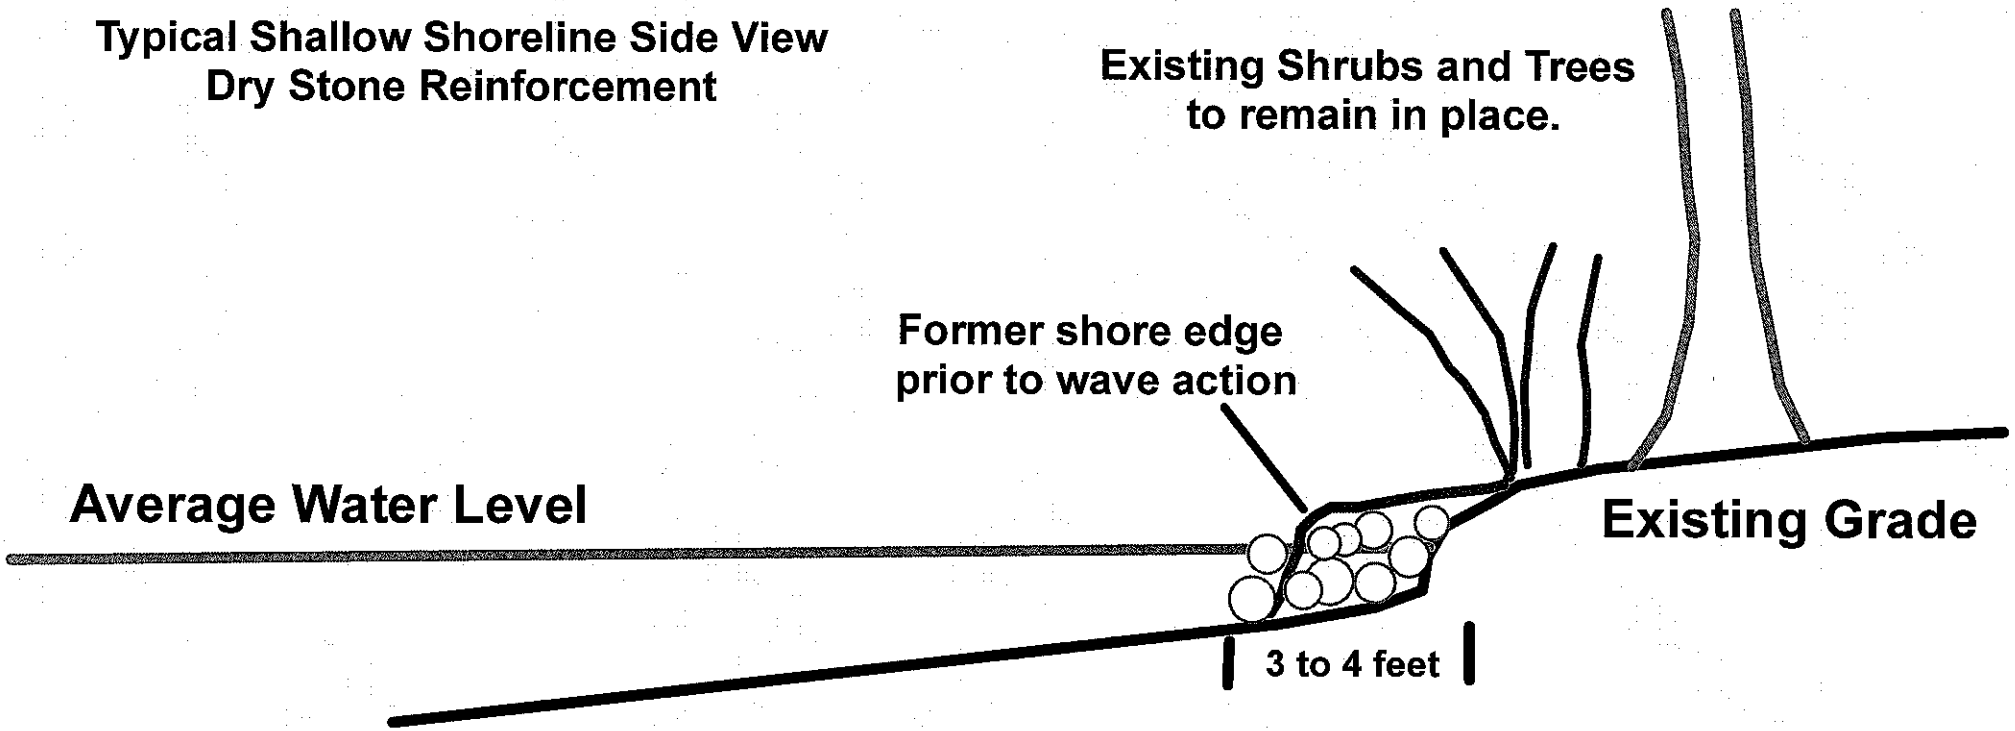

Place by hand smaller stones along the shoreline to reduce waves erosion.

Stones vary is size 6 to 12 inch in diameter.

Stones to be shoved underneath existing vegetation to reduce tree loss.

Allow organic matter and weed debris to fill in the stone voids. Eventually vegetation will take hold.