
Typical Shoreline- Side View - Dry Stonewall Construction

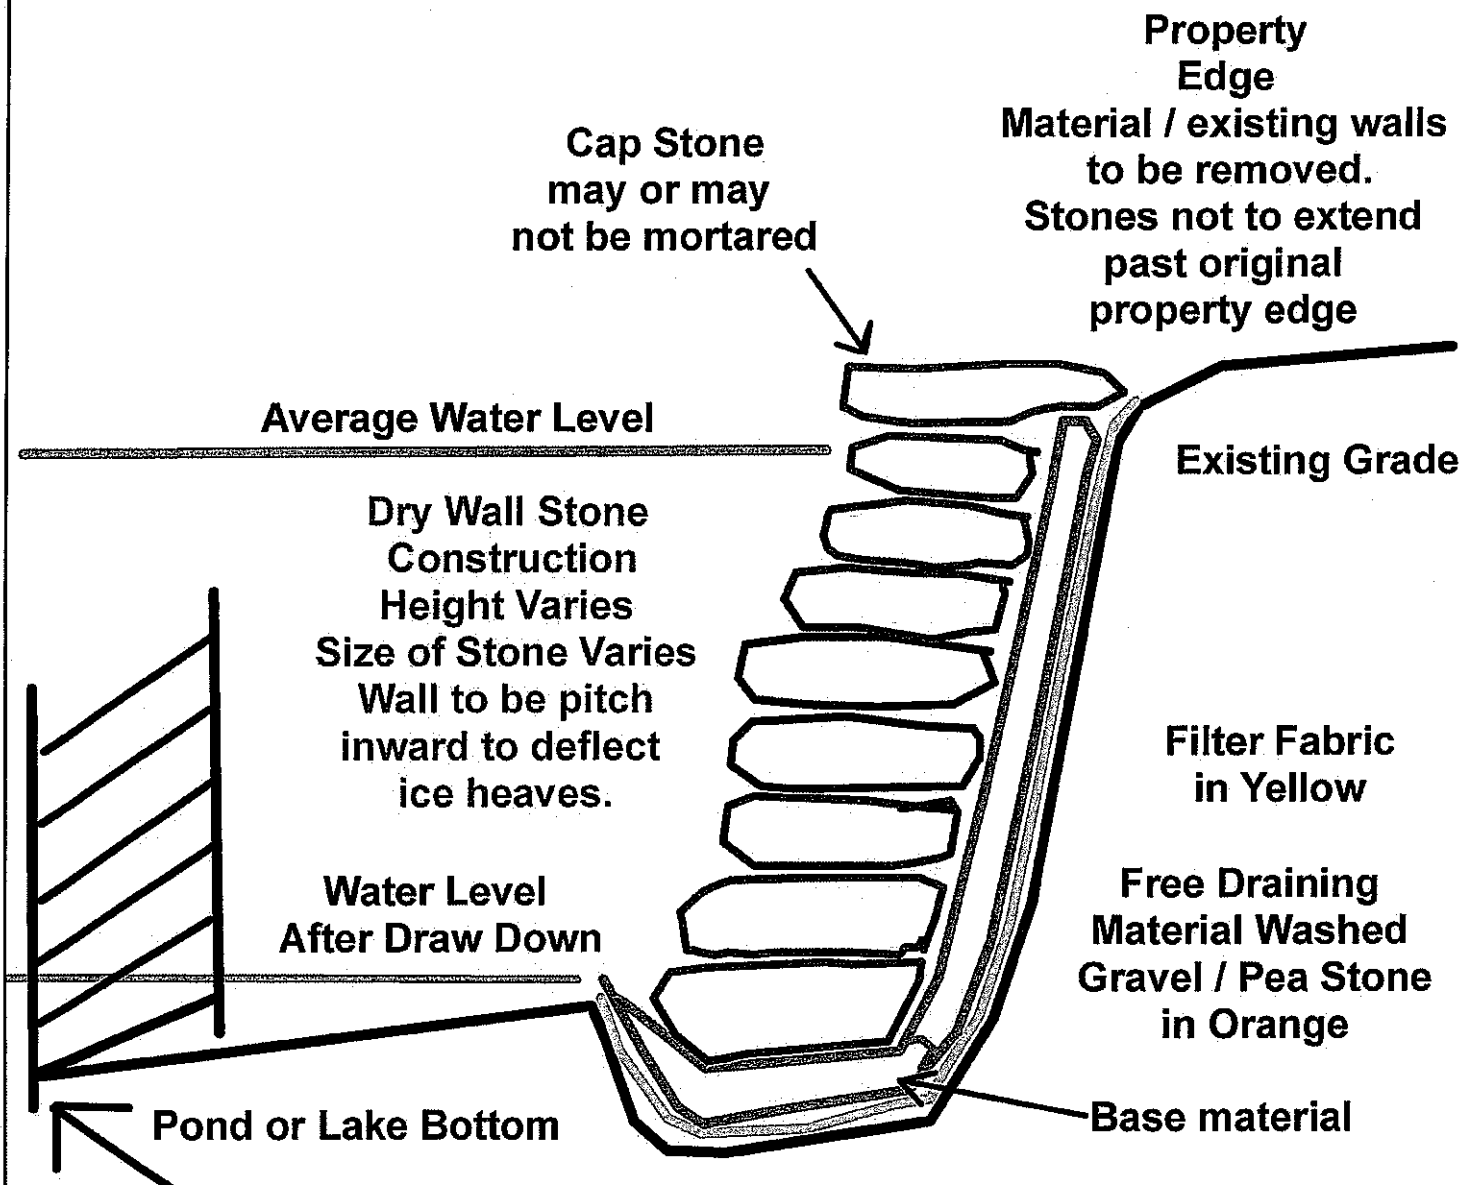


Sediment and Erosion Contol Fencing or Staked Haybales to be installed in front of the lenght of the project prior to construction. It is not to be removed until the project is completed and any exposed soil stabilized.

The IWWC Enforcement Officer to be notified when Sediment and Erosion Control is installed but prior to start of the construction. Once the site is inspected construction can proceed.

The IWWC Enforcement Officer is to be notified when the project is completed for a final inspection.

Typical Shallow Shoreline Side View
Dry Stone Reinforcement

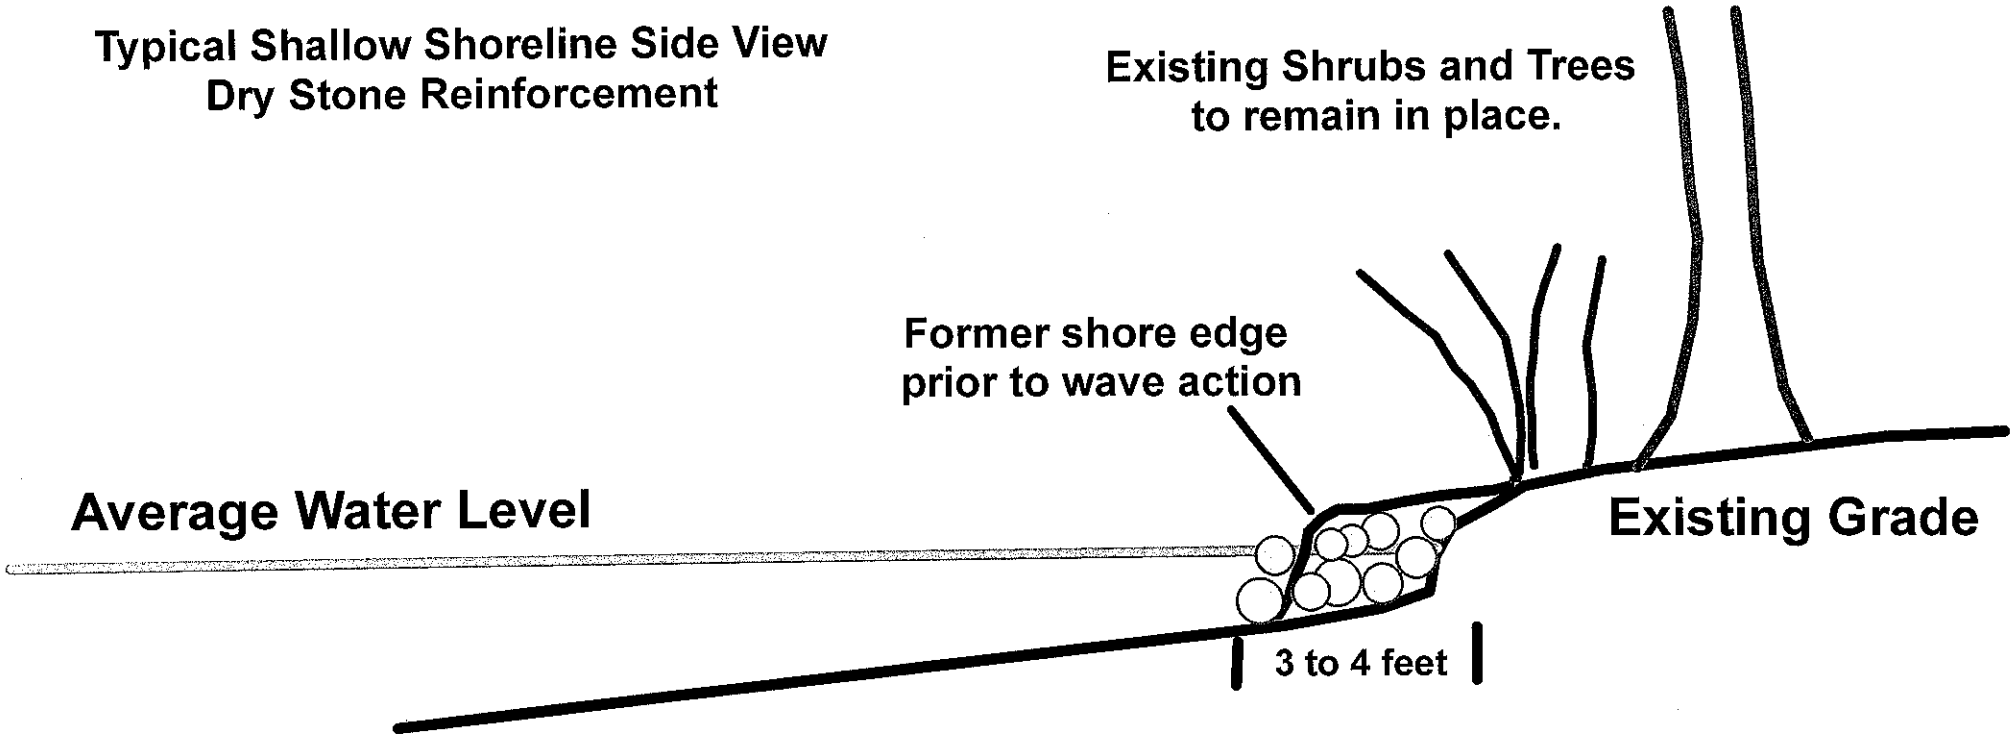


Place by hand smaller stones along the shoreline to reduce waves erosion.

Stones vary is size 6 to 12 inch in diameter.

Stones to be shoved underneath existing vegetation to reduce tree loss.

Allow organic matter and weed debris to fill in the stone voids. Eventually vegetation will take hold

Typical Shallow Shoreline Side View
Dry Stone Reinforcement

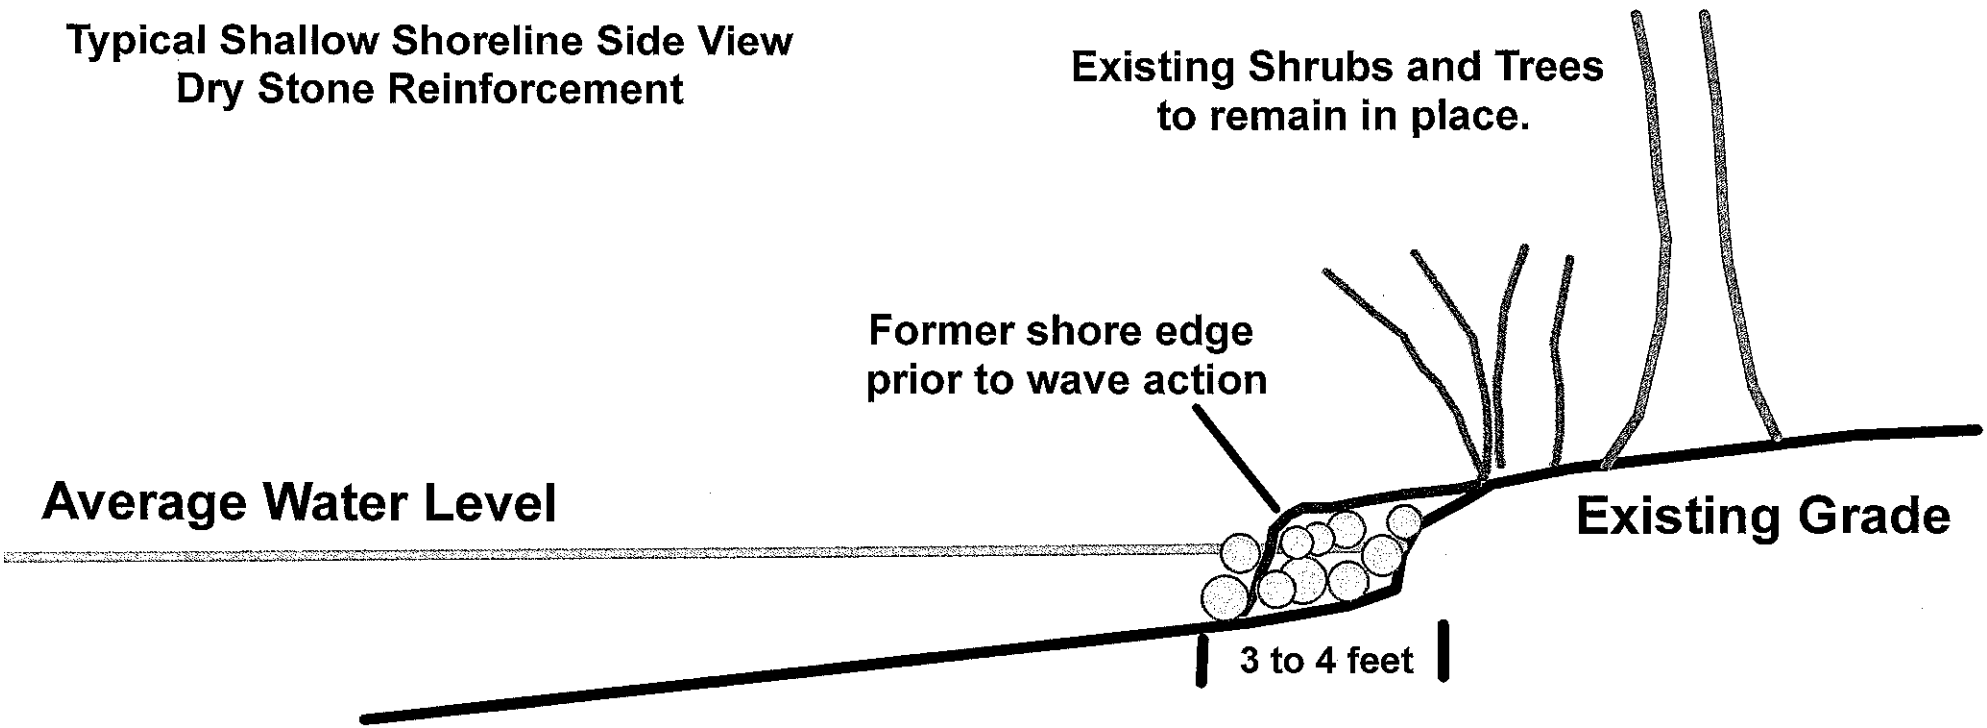

Place by hand smaller stones along the shoreline to reduce waves erosion.

Stones vary is size 6 to 12 inch in diameter.

Stones to be shoved underneath existing vegetation to reduce tree loss.

Allow organic matter and weed debris to fill in the stone voids. Eventually vegetation will take hold.